

User manual and driver for EC200A

无线上网设置.....	2
Wireless internet settings	2
SMS 软件下载和使用手册.....	3
SMS Software Download and User Manual	3
EC200A 与 EC25 在 Caster 状态显示的区别.....	4
The difference in SMSCaster status display between EC200A and EC25	4

YX International Information Co., Ltd

Email: noc@yxinternet.com

Store: <https://yxinternet.com>

无线上网设置

Wireless internet settings

把设备的小开关拨动到“USB”的位置，把设备插入电脑的USB口

Make sure the switch is in the position of "USB", and insert Dongle/ MODEM into the USB port of the computer.



下载并安装设备驱动，点击下载，[Windows](#) [Linux](#) 和 [安卓](#)

Download and install device drivers, click on download, [Windows](#) [Linux and Android](#)



双击“setup.exe”，然后一直“Next”，直到最后点击“Finish”

Double click "setup.exe", then keep "Next" until finally click "Finish"

驱动安装以后，电脑上会自动多一个 Remote NDIS 的网卡，只要插入可以连接网络的SIM卡即可上网

After the driver installation is completed, the computer will automatically additional a "Remote NDIS" network card, which can be connected to the internet by simply inserting a SIM card.



当SIM注册网络的时候，蓝色的LED灯将会快速闪烁；如果SIM注册网络失败或者没有正确插入，蓝色LED灯会亮1秒，停止4秒，如此循环

When SIM registers for the network, the blue LED light will quickly flash; If the SIM registration network fails or is not inserted correctly, the blue LED will light up for 1 second and stop for 4 seconds, repeating this cycle

SMS 软件下载和使用手册

SMS Software Download and User Manual

当安装完成 EC200A 的驱动之后，电脑的“设备管理器”将会出现一个“AT COM PORT”，发送和接收 SMS 将使用这个端口


After installing the EC200A driver, a "AT COM Port" will appear in the "device manager" of the computer, which will be used for sending and receiving SMS



当只需要发送和接收 SMS 时，建议将电脑的“Remote NDIS”网卡禁用，避免一直处于连接网络的状态，消耗没有必要的流量

When only sending and receiving SMS, it is recommended to disable the computer "Remote NDIS" network card to avoid being constantly connected to the network and consuming unnecessary traffic.

Setup path: Start--Settings--Network&Internet--Ethernet--Change adapter options

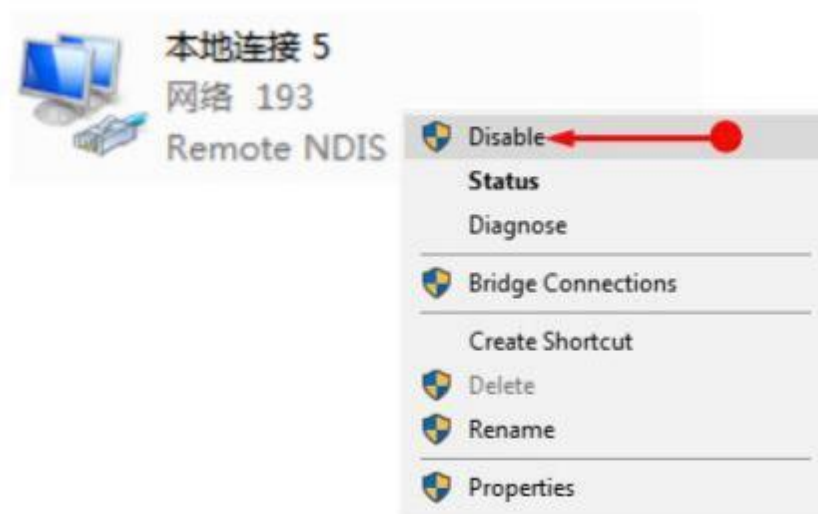

以下是两种 SMS 软件，可以点击下载软件和手册

The following are two types of SMS software, which can be download by clicking on the software and manual

1. [SMSDeliverER \(Suggested use\)](#)
2. [SMSCaster](#)

如果你使用带有 UART HUB 多端口的底座设备，需要安装 UART 的驱动程序

If you are using base device with UART HUB multi port, you need to install the UART driver program


http://down.yxinternet.com:2018/download/UART_Caster_install_manual.pdf

EC200A 与 EC25 在 Caster 状态显示的区别

The difference in SMS Caster status display between EC200A and EC25

如果 SIM 注册网络正常，EC25 会显示“Ready”，EC200A 在“Signal”栏会显示具体的数值

If the SIM registration network is normal, EC25 will display "Ready", and EC200A will display specific values in the "Signal" column

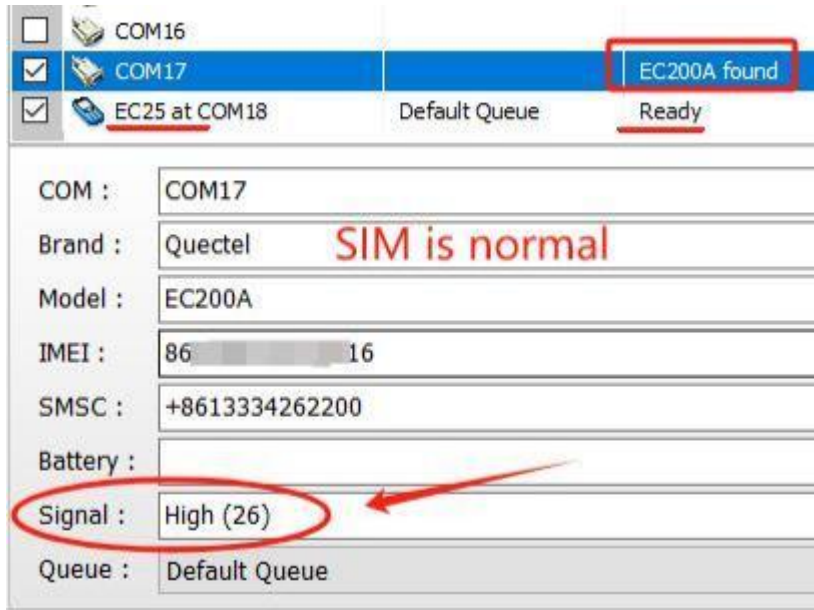

如果 SIM 注册网络不正常，EC25 会显示“EC25 found”，EC200A 在“Signal”栏会显示“Unknown”

If the SIM registration network is not working properly, EC25 will display "EC25 found", and EC200A will display "Unknown" in the "Signal" column

